









### Installation under doorway frames:

1. Slide plank under pre-cut door frame.
2. Tap the long side joint closed.
3. Tap the end joint closed.


### WORKING WITH LIMITED CLEARANCE

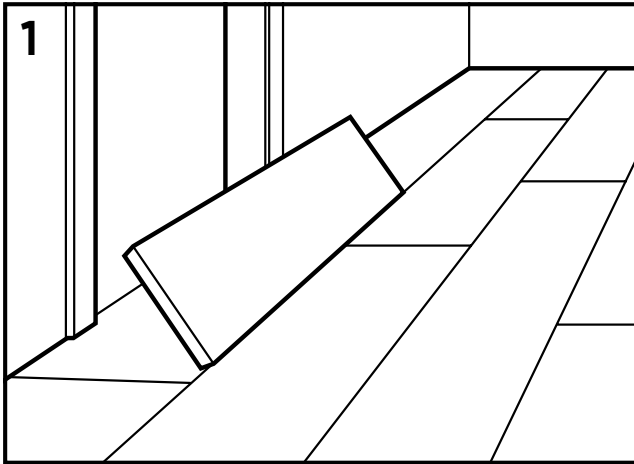


Some long edge joints cannot be installed using a 20° angle.

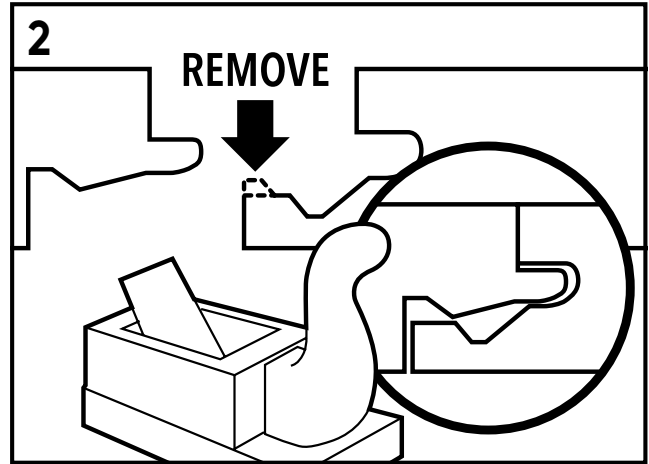

Remove top part of the groove profile.

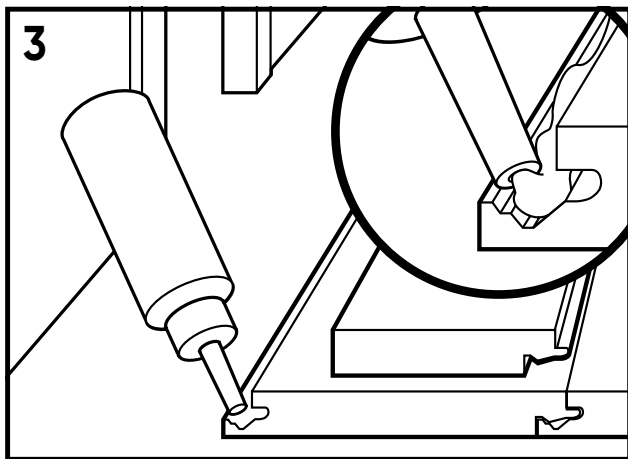

Use good quality wood glue to make the connection.

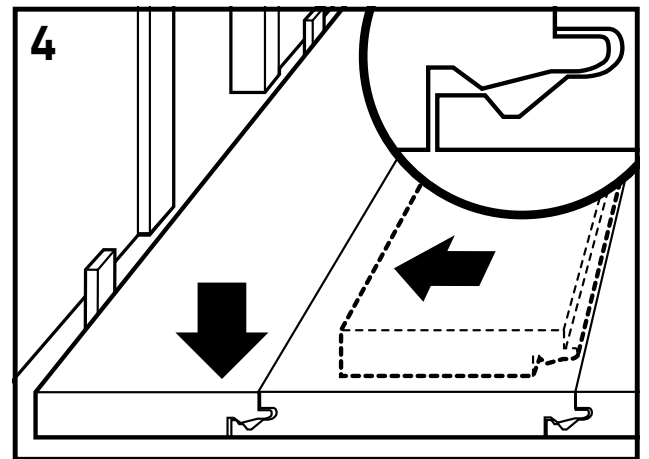

Slide panel into space horizontally and slot into profile. Use these modified planks under doorframes, radiators, cabinet fronts, etc. Use the pull bar to slide the planks where needed.

### For questions please call:

(800) 245-0652 or visit [www.naturallyagedflooring.com](http://www.naturallyagedflooring.com)